CAMCORDER FEATURE LOCATOR

RIGHT SIDE

LEFT SIDE

HOW TO SHOOT A RECORDING WITH YOUR CAMCORDER

1. Set power to "On."

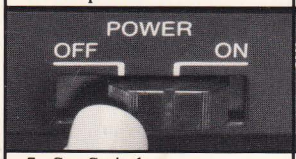

2. Set to "Camera."

3. Set to "Standby."

4. Set Switch.

5. Set Switch.

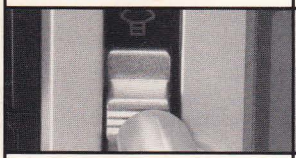

6. Remove.

7. Push.

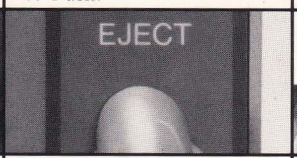

8. Insert cassette.

9. Set to "Operate."

10. Grip.

11. Place on shoulder.

12. Focus.

13. Select subject.

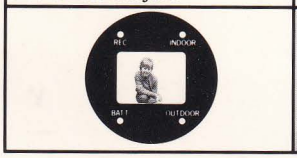

14. Focus lens.

15. Push to record.

16. Push to stop.

HOW TO PLAY BACK A RECORDING THROUGH THE CAMCORDER VIEWFINDER

FOR QUICK CONFIRMATION OF RECORDING:

- Push and release.

- Will play then stop.

TO PLAY BACK MORE THAN THE LAST 4 SEC:

1. Set to "On."

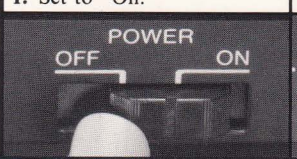

2. Set to "Playback."

3. Set to "Operate."

4. Rewind cassette.

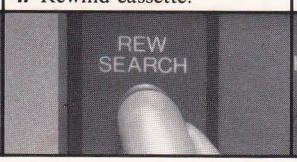

5. Push and release.

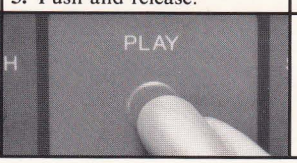

6. Use earphone.

HOW TO USE THE DIGITAL COUNTER AND THE MEMORY FEATURE

1. Set to "Counter".

2. Push and release.

3. Push and release.

4. Stop recording.

5. Push.

6. Tape will rewind.

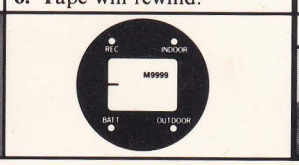

MODEL 2400—TO USE DATE SET FEATURE:

1. Set to "Date".

2. Push and release both.

(DETACH, FOLD, AND RETAIN FOR READY REFERENCE)